


Face Mount

Cable Runs through Two Corners

When going around two corners, it's necessary to tension the cable from both ends as shown in Deck 3.

Use the 371 Series.

The tensioning devices are an Adjust-a-Body® with Hanger Bolt, which lags into the wood post on one end, and Push-Lock® Turnbuckle with Hanger Bolt on the other end.

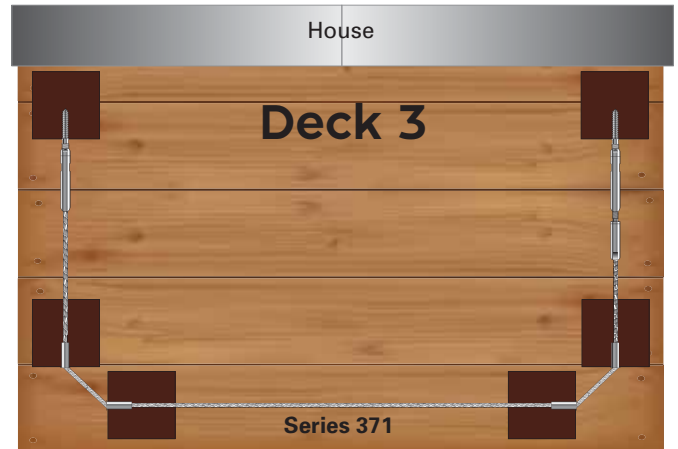

For Post Protector Tubes, see Tools and Essentials section.

Tools needed for 371 Series:

- 5/32 drill bit if 1/8" cable, 7/32 if 3/16" cable
- Drill bit for lag installation: 7/32" for Common Redwood, 15/64" for Common Douglas Fir, 9/32" for Red Oak/Maple
- 1/4 wrench for turning Hanger Bolts
- Two 7/16 wrenches for tensioning Adjust-a-Body® and tightening Push-Lock® Turnbuckle
- 3/8 wrench for Push-Lock® Stud
- Cable cutting tool
- If using Post Protector Tubes, 1/4 drill bit

Series 371 Kits

Cable Length	1/8" cable	3/16" cable
	PART NO.	PART NO.
30'	37130	37130-6
40'	37140	37140-6
50'	37150	37150-6
60'	37160	37160-6